

# Handy Grip Termination Stud Installation Instructions




Cable Art, Inc. accepts no liability for improper use or assembly of these products.

**Install tensioning end of run to one end post and run cables through intermediate posts, before installing Handy Grip Termination Stud.**

1. Make sure the outside holes are drilled properly in the end posts where you will be installing the Handy Grip Termination Stud. **If you are installing the Handy Grip Termination Stud into a metal or wood railing**, Drill a **25/64" (0.390)** hole for the 1/8" Handy Grip Termination Stud (**10F40102**) and **29/64" (0.453)** hole for the 3/16" Handy Grip Termination Stud (**10F60102**)

**If you are using wood end posts**, use the 5/16" washer (**11HW10**) for the 1/8" fitting, and 3/8" washer (**11HW12**) for the 3/16" fitting.

2. Slide the Handy Grip Termination Stud into the hole in your end post with the hole in the fitting facing the inside (cable side) of the post.
3. Pull the cable tight and mark the cable at a point 1/8" from the backside of the post. Cut the cable at the mark, using a cable cutter.

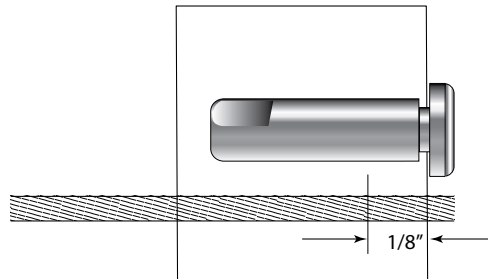

4. Disconnect the tensioning side of the cable and pass the cut cable through the end post. Follow the **Handy Grip Termination Stud Assembly Instructions** for assembly.
5. Install the Handy Grip Termination Stud into the end post. Reconnect the tensioning end and tension the cable assembly.