


Cable Art Incorporated

Handy Grip Installation Guide

If you have chosen the Handy Grip System for your project the instructions below should help you with the install process. Please be sure to read complete instructions before proceeding. Improper installation can result in injury! If you have any questions please call before proceeding. (If one end of cable is machine swaged, read step #1, then go to Step #4)

- | **Step 1:** Make sure you have all the proper equipment and parts required
- | **Step 2:** See CAI Handy Grip Assembly Instruction.pdf for assembly instructions.
- | **Step 3:** Attach completed first fitting at point of beginning and run cable to the other end. (Make sure to adjust all turnbuckles (if used), etc. to 2/3 open position.)
- | **Step 4:** Attach loose Handy Grip fitting to end position and pull cable tightly along side to measure for cut as shown below

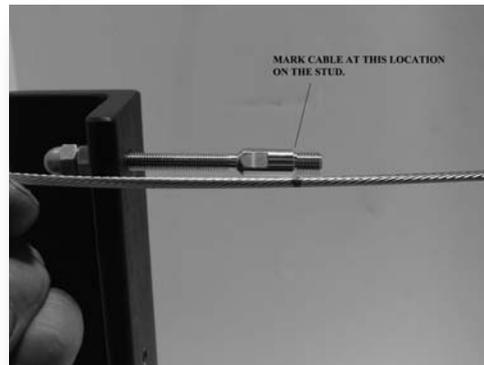

- | **Step 5:** Repeat step #2 for this end fitting.
- | **Step 6:** **If Threaded Stud are used**, attach washer and hex nut to both sides of the cable assembly. Cables need to be tensioned to about 150 to 200 pounds each. After tensioning, attach additional hex nut and lock together. Cut excess thread off of stud with a cut off wheel. Remove additional hex nut and replace with a cap nut (acorn).
- | **Step 6A:** **If Turnbuckles are used**, connect the assembly to the end post and tension cable. Cables need to be tensioned to about 150 to 200 pounds each.