


Installation Instructions for the Swageless Quick-Connect® Cable Hardware.


Using the Cut Gauge Line




Use the Cut Gauge Line on the Quick-Connect® body to locate and mark the cable for proper trim length. This is typically used when attaching the second in a pair of end fittings.

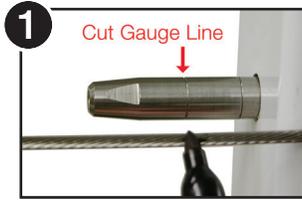


1 Stretch the cable tight. Mark with felt pen at Cut Gauge Line.

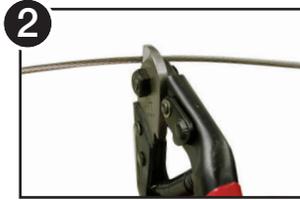

2 Trim cable at the mark.

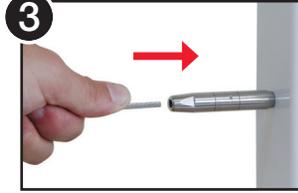

3 Insert cable as far as it will go into fitting. If cable is too long, remove it using a Release Tool and trim as needed.

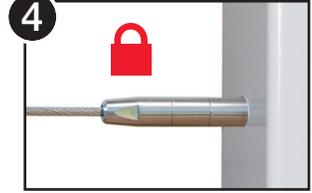

4 Quick-Connect® Jaws lock onto cable automatically. Tighten the cable line using the tenson adjustment fitting.

Installing Quick-Connect® Pivot Fitting

The Pivot Fitting is comprised of a Quick-Connect® body and a stainless steel Hanger Bolt. The Hanger Bolt needs to be installed prior to the Quick-Connect® body. **DO NOT** attempt to install the Hanger Bolt with the Quick-Connect® Fitting attached, or you may damage the fitting.



1 Spin Hanger Bolt Installation Tool onto the end of the bolt.



2 Drill 7/64" pilot hole. Harder woods may need larger hole.



3 Drive Hanger Bolt into post using 7/16" socket or electric drill with 1/2" chuck.




4 Drive until threaded section protrudes approx. 1/2" from post face.



5 Apply a high strength thread locking compound to threads.



6 Spin Quick-Connect® onto Hanger Bolt until it bottoms out.

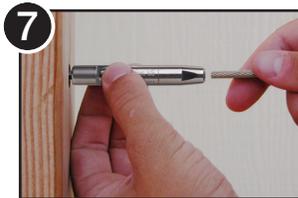

7 Insert cable all the way into Quick-Connect® fitting until it stops. Jaws will lock automatically.