


Installation Instructions for the Swageless Quick-Connect® Cable Hardware.


Using the Cut Gauge Line




Use the Cut Gauge Line on the Quick-Connect® body to locate and mark the cable for proper trim length. This is typically used when attaching the second in a pair of end fittings.

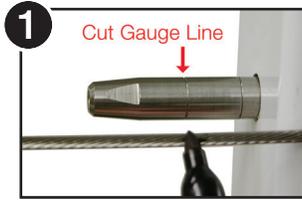


1 Stretch the cable tight. Mark with felt pen at Cut Gauge Line.

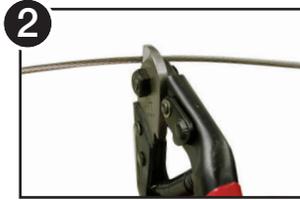

2 Trim cable at the mark.

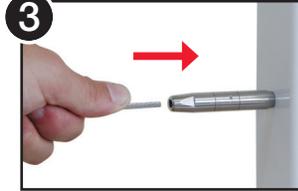

3 Insert cable as far as it will go into fitting. If cable is too long, remove it using a Release Tool and trim as needed.

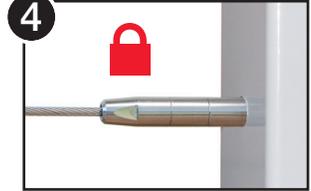

4 Quick-Connect® Jaws lock onto cable automatically. Tighten the cable line using the tension adjustment fitting.

Installing Quick-Connect® Expansion Anchor

The Expansion Anchor Fitting is comprised of a Quick-Connect® body and a stainless steel Expansion Anchor Bolt. Install the Anchor prior to attaching the Quick-Connect® body. **DO NOT** attempt to install the Anchor Bolt with the Quick-Connect® Fitting attached, or you may damage the fitting.




1 Drill 1/4" hole with masonry bit to 1-1/2" (minimum) depth. Blow debris out of hole.



2 Carefully tap the Expansion Bolt until the machine threads protrude 3/4".



3 Tighten nut to set the anchor. Apply a high strength thread locking compound to threads. Spin Quick-Connect® fitting onto Expansion Bolt until it bottoms out.

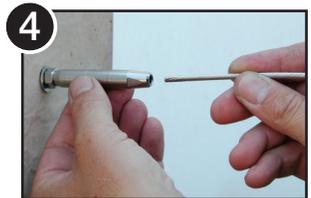

4 Insert cable all the way into Quick-Connect® fitting until it stops. Jaws will lock automatically.