


Installation Instructions for the Swageless Quick-Connect® Cable Hardware.

Using the Cut Gauge Line




Use the Cut Gauge Line on the Quick-Connect® body to locate and mark the cable for proper trim length. This is typically used when attaching the second in a pair of end fittings.

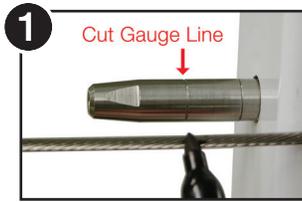


1 Stretch the cable tight. Mark with felt pen at Cut Gauge Line.



2 Trim cable at the mark.

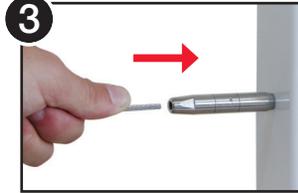

3 Insert cable as far as it will go into fitting. If cable is too long, remove it using a Release Tool and trim as needed.

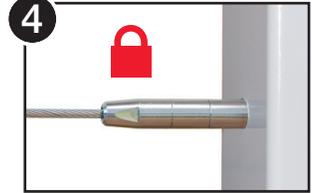

4 Quick-Connect® Jaws lock onto cable automatically. Tighten the cable line using the tension adjustment fitting.


Installing the Quick-Connect® Expansion Anchor Swivel Turnbuckle



1 Drill 1/4" hole with masonry bit to 1-1/4" (minimum) depth. Blow debris out of hole.




2 Carefully tap the Expansion Anchor (with washer & anchor nut).

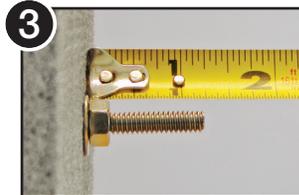


3 Tap until approximately 1-1/4" of the threaded shaft protrudes from the wall.




4 Use 7/16" wrench to tighten anchor nut until anchor is properly seated and locked.

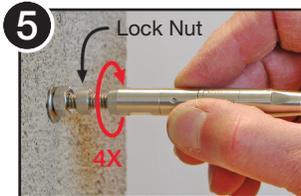


5 Spin the turnbuckle lock-nut onto the exposed threads. Then attach Quick-Connect® and rotate the body 4 full turns.

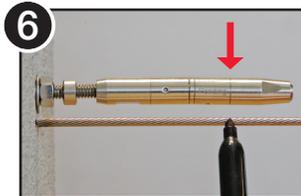

6 Stretch cable tight across fitting and mark at Cut Gauge Line. Cut cable at mark.

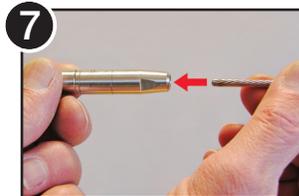


7 Loosen Quick-Connect® 2 full turns and insert cut cable end as far as it will go into the fitting; the jaws will automatically lock on.

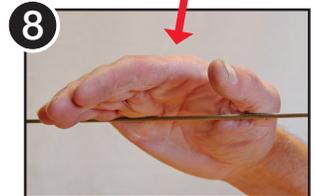

8 Hand tighten the Quick-Connect® as far as possible, then swiftly hit the cable line with your palm several times to ensure that jaws are securely seated.



9 Use 3/8" wrenches to tighten the Quick-Connect® to desired final tension.

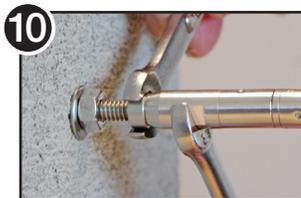

10 Tighten the lock-nut against the Quick-Connect® to prevent the fitting from loosening.