


# Installation Instructions for the Swageless Quick-Connect® Cable Hardware.


## Using the Cut Gauge Line




Use the Cut Gauge Line on the Quick-Connect® body to locate and mark the cable for proper trim length. This is typically used when attaching the second in a pair of end fittings.

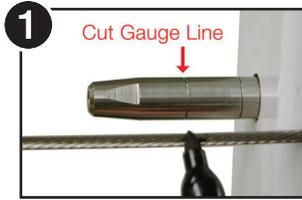

1 Stretch the cable tight. Mark with felt pen at Cut Gauge Line.

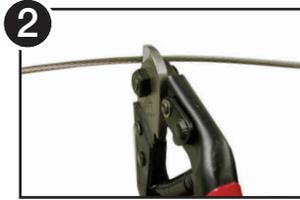

2 Trim cable at the mark.

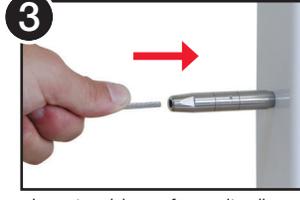


3 Insert cable as far as it will go into fitting. If cable is too long, remove it using a Release Tool and trim as needed.



4 Quick-Connect® Jaws lock onto cable automatically. Tighten the cable line using the tension adjustment fitting.

## Installing the Quick-Connect® Fixed Surface Mount

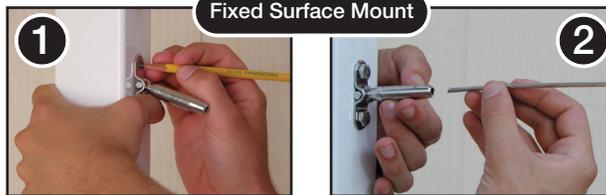

1 Measure, mark and drill pilot holes. Bolt/screw Surface Mount Fitting to wall.

2 Insert cable all the way into Quick-Connect® fitting until it stops. Jaws lock automatically.