


Installation Instructions for the Swageless Quick-Connect® Cable Hardware.

Using the Cut Gauge Line



Use the Cut Gauge Line on the Quick-Connect® body to locate and mark the cable for proper trim length. This is typically used when attaching the second in a pair of end fittings.

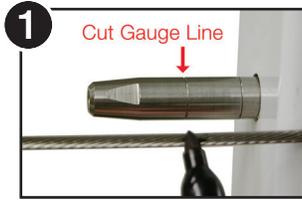


1 Stretch the cable tight. Mark with felt pen at Cut Gauge Line.



2 Trim cable at the mark.



3 Insert cable as far as it will go into fitting. If cable is too long, remove it using a Release Tool and trim as needed.

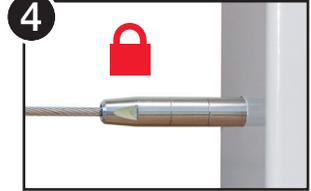

4 Quick-Connect® Jaws lock onto cable automatically. Tighten the cable line using the tension adjustment fitting.


Installing the Quick-Connect® Threaded Terminal



1 Drill 5/16" hole through your post. Counterbore with 1/2" drill on inside face if embedding Quick-Connect® body.



2 Attach washer and nut, leaving room for final tensioning of fitting & cable.

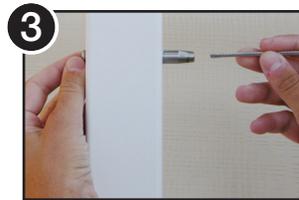

3 Insert cable all the way into Quick-Connect® fitting until it stops. Jaws lock automatically.



4 Tighten the nut to tension the line. Use wrench to prevent the Quick-Connect® from rotating during tensioning.