


# Series 6502 Installation Instructions


## Hole size for 3/16" dia. cable installation:

Drill 7/32" hole clear through intermediate posts.


Drill and tap 5/16-24 threaded holes on the inside of each end post.

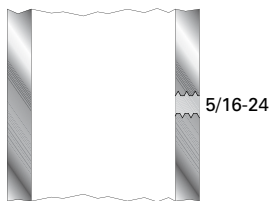

1. Install the tensioning end first with the Adjust-A-Body with Threaded Bolt Tensioner by threading the short end of the bolt into the pre-tapped hole in your end post using a 7/16" open end wrench.
2. Screw the lock nut all the way onto the 2" long threaded end of the bolt.
3. Thread the body with the cable attached onto the threaded end of the bolt and turn half way along the threads.

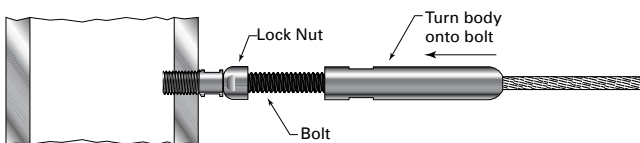

4. Run the bare end of the cable through all your intermediate posts and to the end post where you will be installing the Push-Lock fitting.

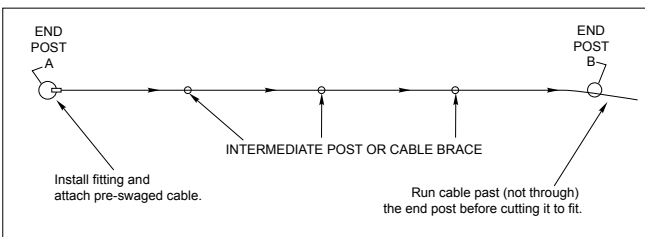


5. Start the Push-Lock body threads into the pre-tapped post by hand.




6. Thread the Push-Lock coupler onto the post and tighten with 7/16" wrench.



- Pull the cable tightly along the side of the fitting and mark the cable 1-3/16" from the end of the fitting opposite the post. Mark and cut the cable on your mark.

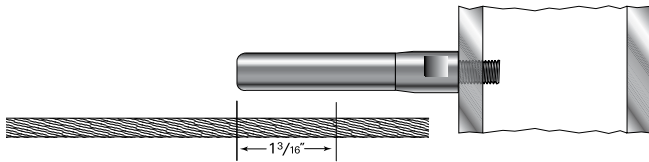

- Push the cable into the hole in the fitting as far as it will go (approximately 1-1/16"). Twist the cable in a right hand direction as you push it into the fitting.

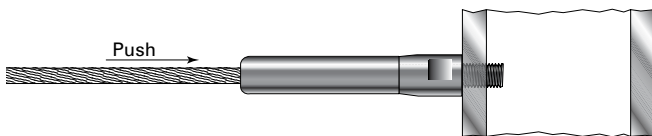


- Pull the cable hard backwards by hand to set the gripping action of the Push-Lock fitting.




- Go to the other end and tension the cable by holding it to prevent the cable from turning while you turn the Adjust-A-Body with a 7/16" open-end wrench. Be careful to protect the cable from damage while tensioning the Adjust-A-Body.

- Turn the lock nut against the body and tighten with open-end wrenches. Leave about 1/2" of thread exposed when tight for future tensioning if needed.

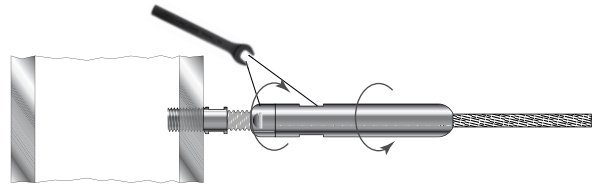

- Tension in sequence, beginning with the outside cables and moving from side to side toward the center.

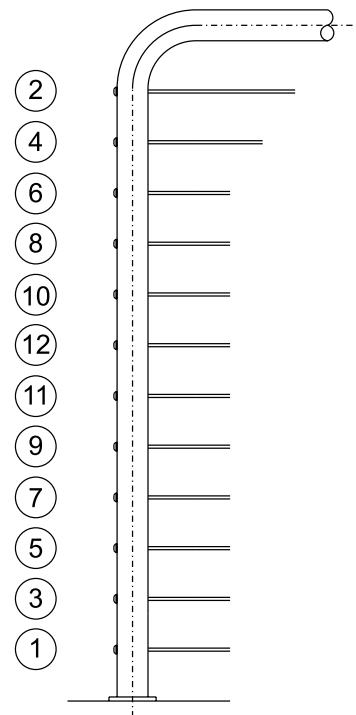

RECOMMENDED TENSIONING SEQUENCE